



# Comet EXtreme EXB


Installation manual  
Manuel d'installation

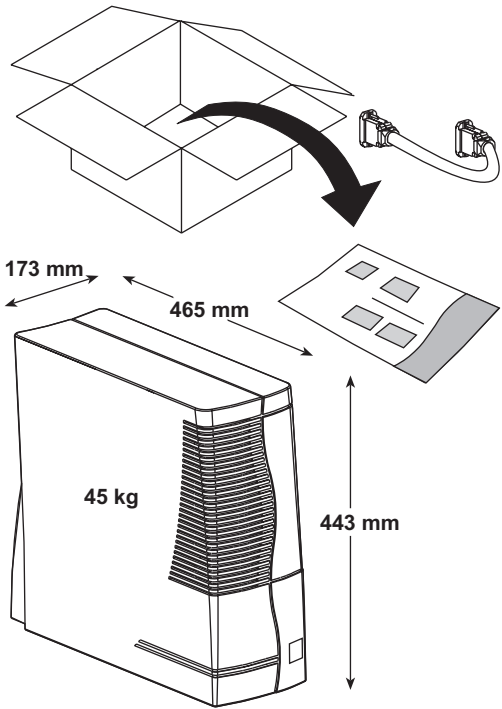


## 1A 4.5 / 6 kVA 2A

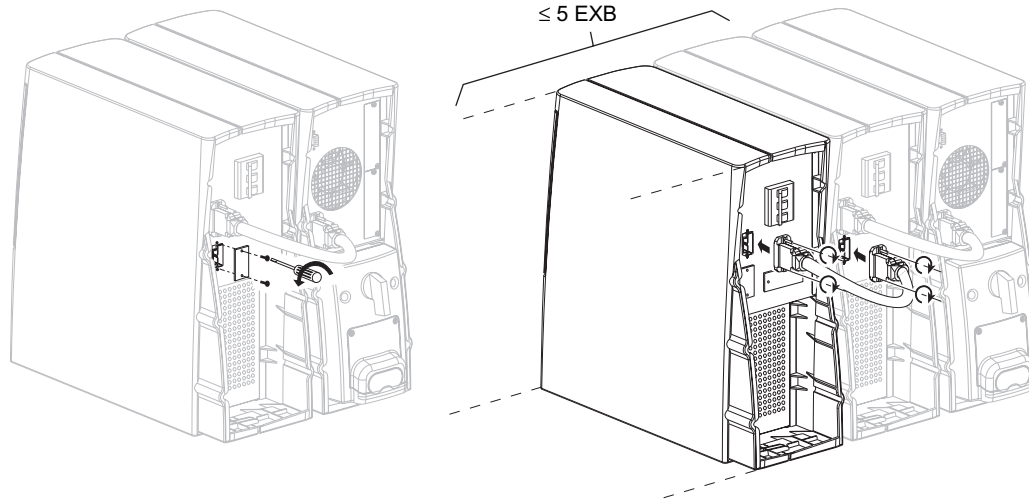


## 1B 12 kVA

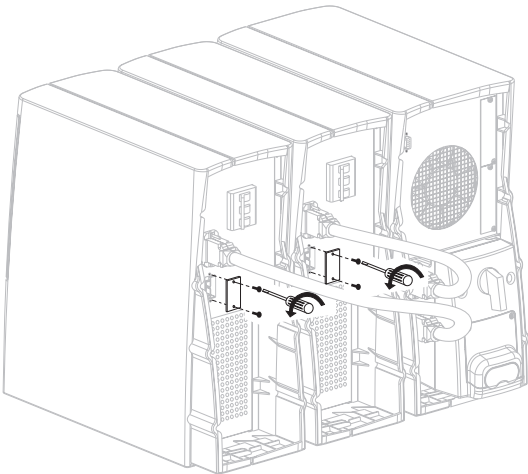


## 2B

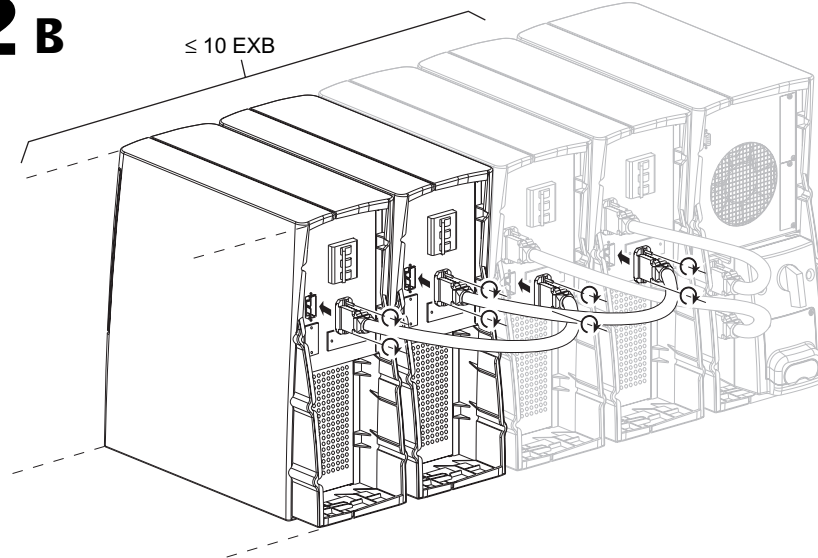


Connection indications must be imperatively respected.  
Respecter impérativement les indications de raccordement.

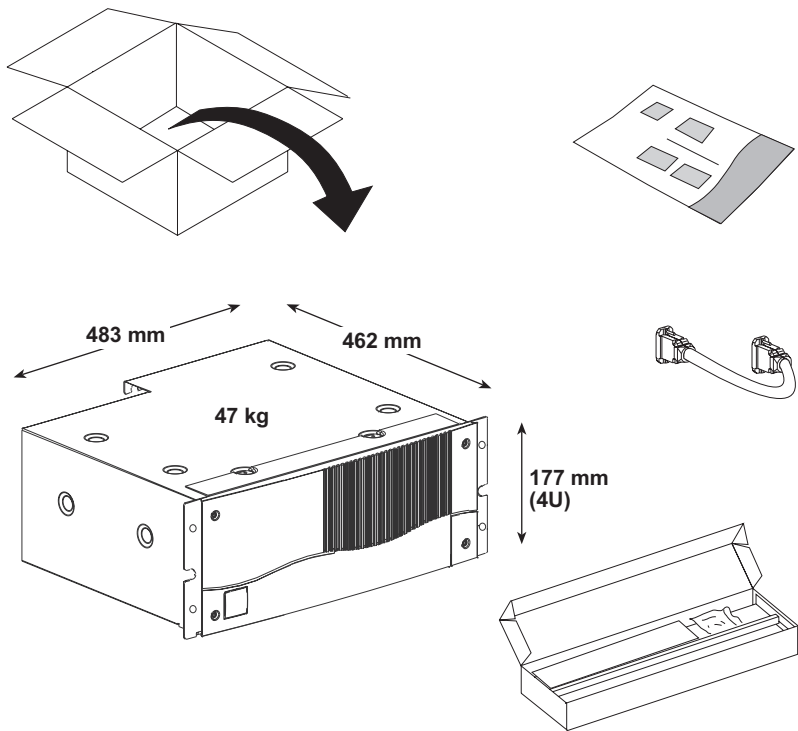


## 2A 4.5 / 6 kVA (Rack)

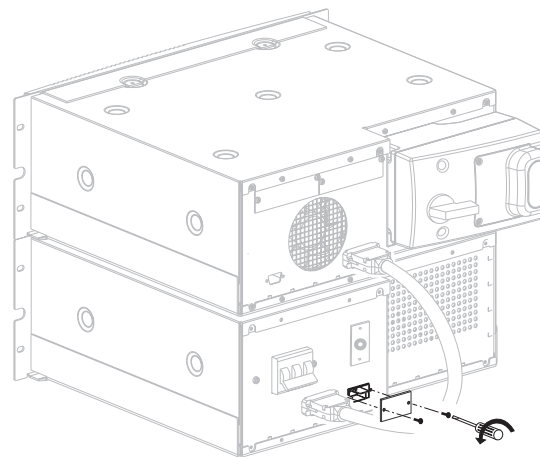



## 3A

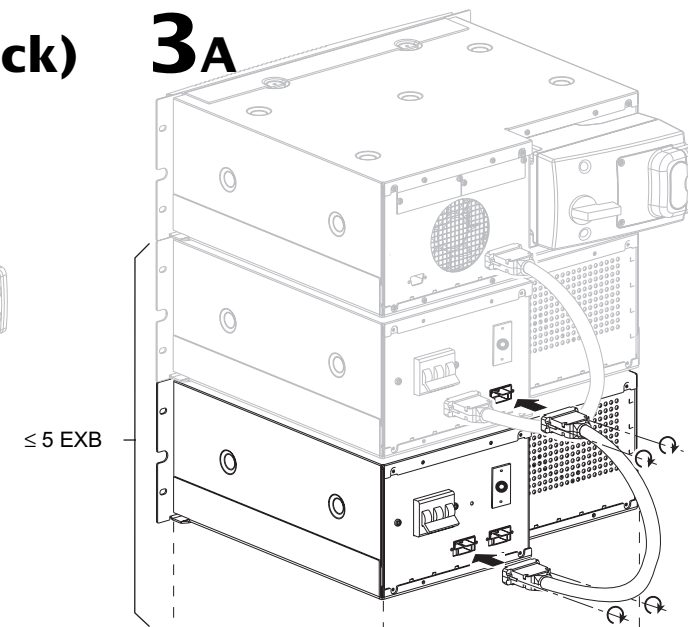

## 2B 12 kVA (Rack)

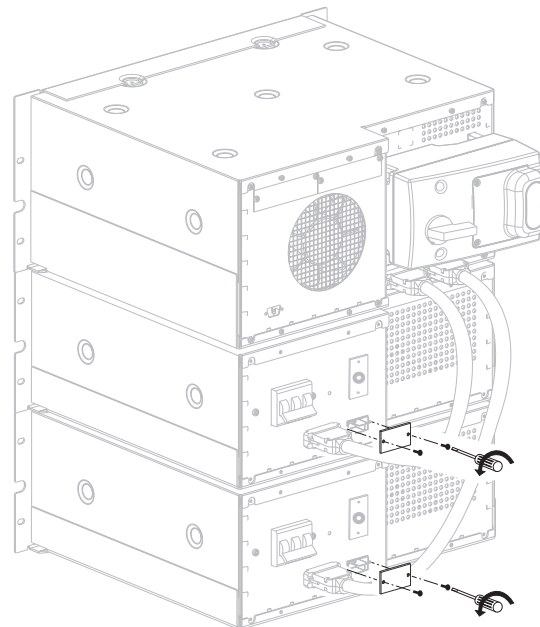



## 3B

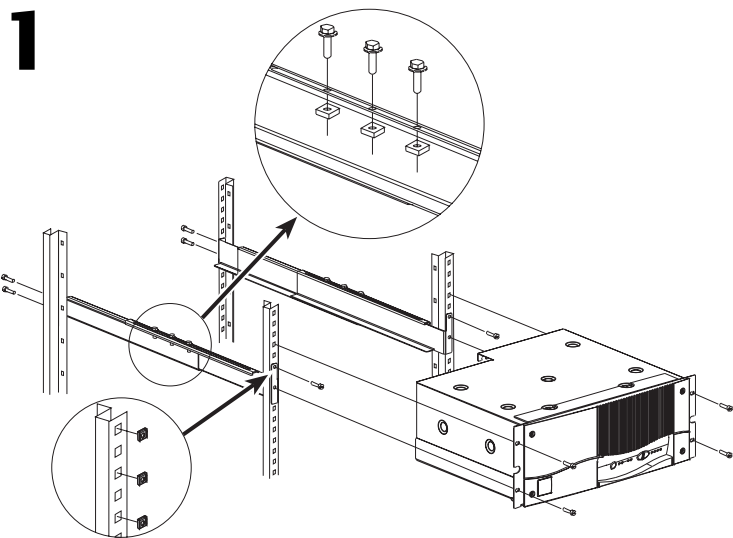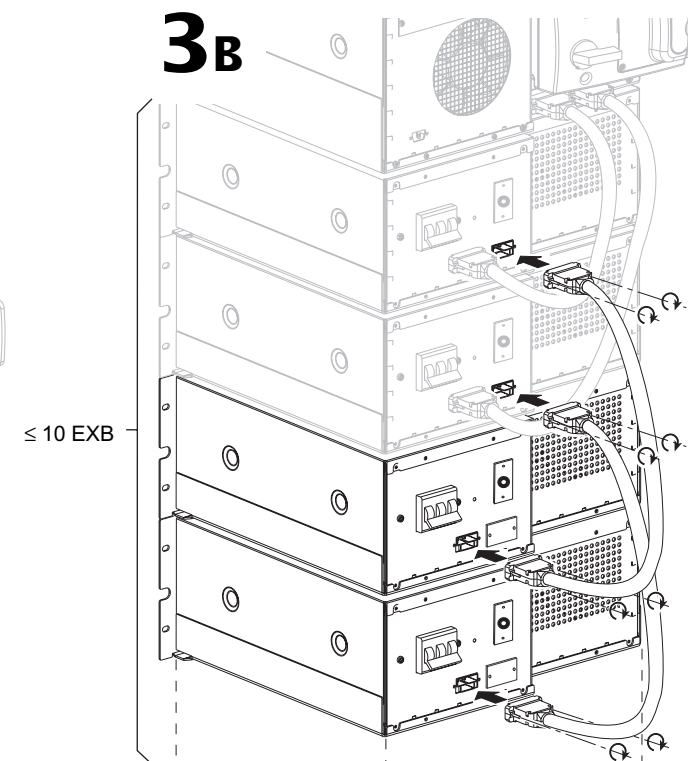


Connection indications must be imperatively respected.  
Respecter impérativement les indications de raccordement.

# Emergency off button connection (option) Raccordement du bouton d'arrêt d'urgence (option)




1

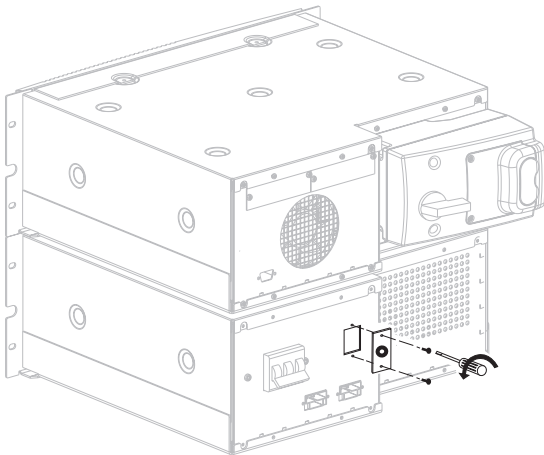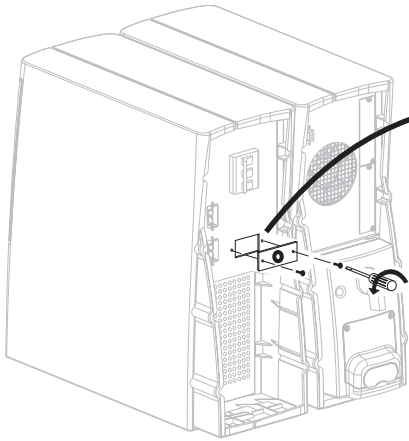

2

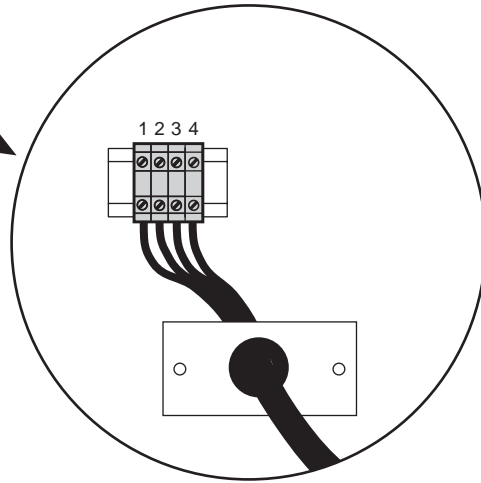

3

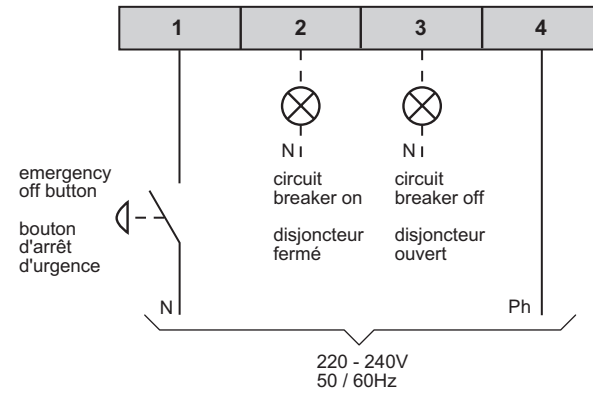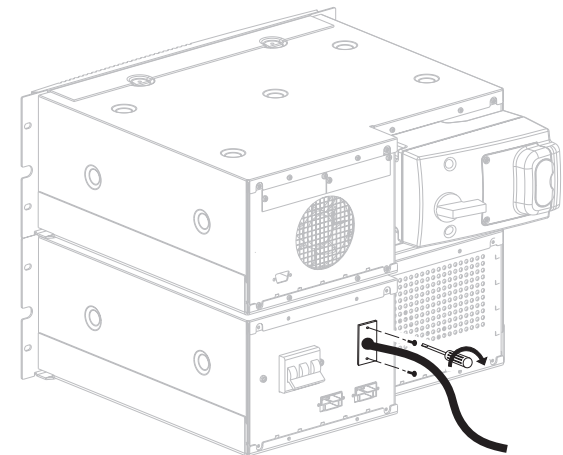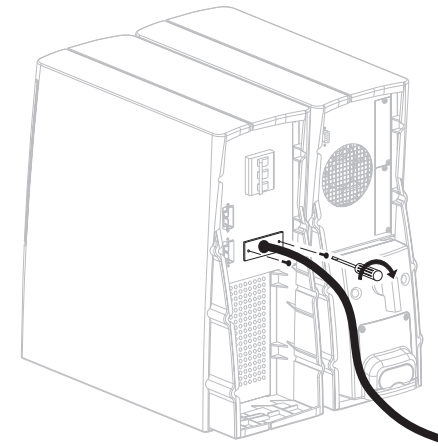

**MGE UPS SYSTEMS**

---

140, Avenue Jean Kuntzmann  
ZIRST - Montbonnot St Martin  
38334 - ST ISMIER CEDEX - FRANCE

---

**Internet : [www.mgeups.com](http://www.mgeups.com)**



5103321700-AB