



| UPS | Battery Extension EXB | EXB (kg) | EXB H x L x P (mm) |
|---------------|-----------------------|----------|--------------------|
| EXTreme 700C | EXTreme EXB 700C | 11,5 | 235,5 x 145 x 400 |
| EXTreme 1000C | EXTreme EXB 1000C | 15 | 235,5 x 145 x 400 |
| EXTreme 1500C | EXTreme EXB 1500C | 21 | 235,5 x 145 x 505 |


1 x EXB

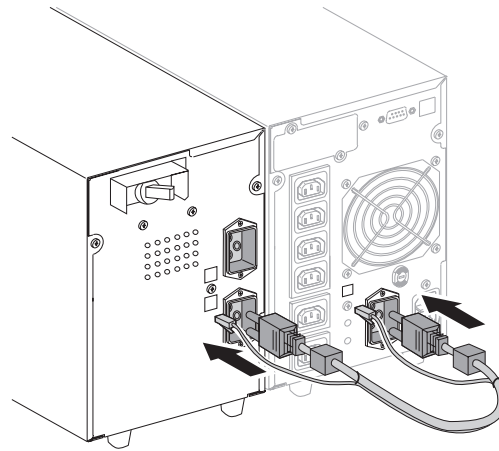

2 x EXB

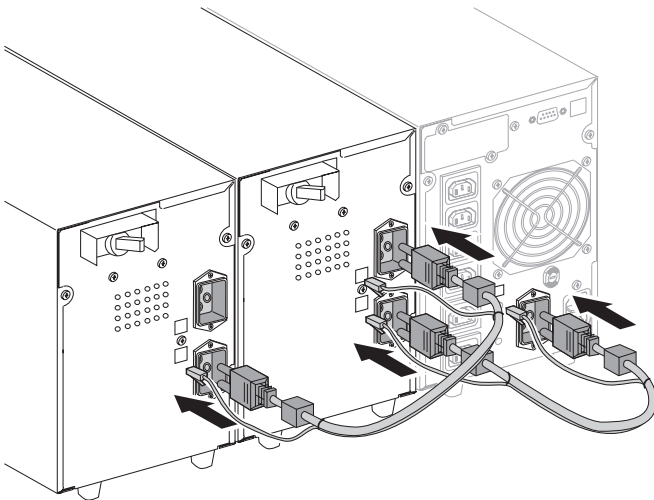

3 x EXB

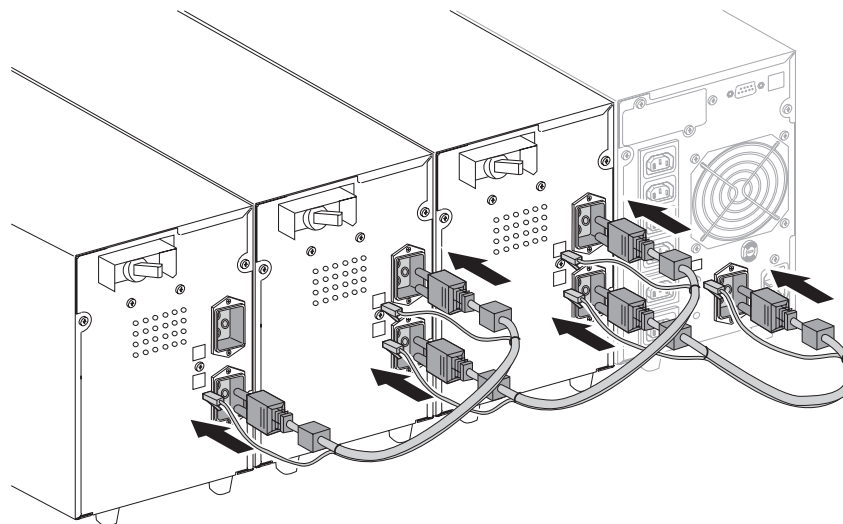


Pulsar EXTreme EXB 700C EXB 1000C EXB 1500C

Installation manual


Manuel d'installation

5103180300/AB

M G E
UPS SYSTEMS

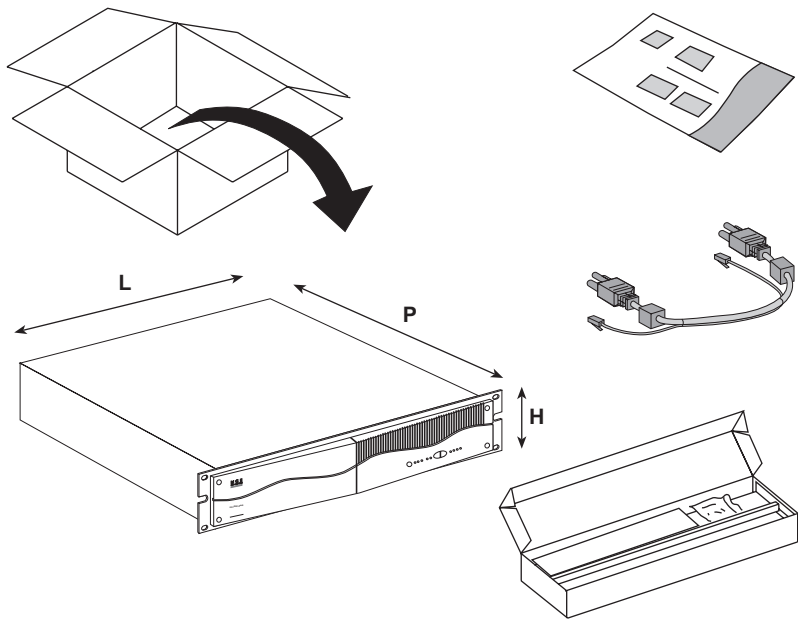


1 x EXB (Rack)

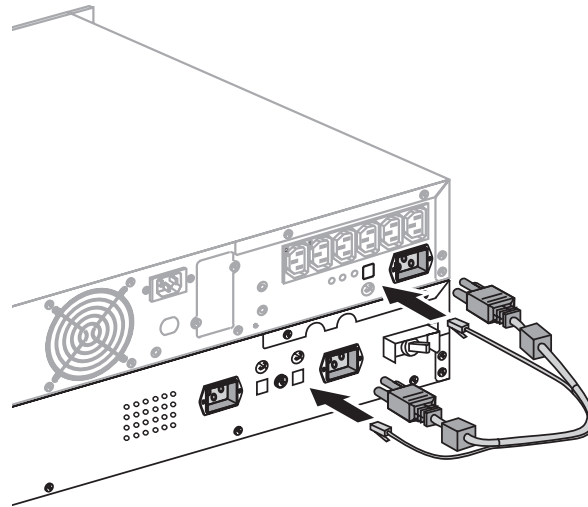


| UPS | Battery Extension EXB |
|---------------------------|-------------------------------|
| <i>EXtreme 700C Rack</i> | <i>EXtreme EXB 700C Rack</i> |
| <i>EXtreme 1000C Rack</i> | <i>EXtreme EXB 1000C Rack</i> |
| <i>EXtreme 1500C Rack</i> | <i>EXtreme EXB 1500C Rack</i> |

| EXB | EXB H x L x P (mm) |
|-------------------------------|-----------------------|
| <i>EXtreme EXB 700C Rack</i> | 88 x 482,6 x 430 |
| <i>EXtreme EXB 1000C Rack</i> | 88 x 482,6 x 430 |
| <i>EXtreme EXB 1500C Rack</i> | 88 x 482,6 x 493 |

| EXB | EXB (kg) |
|-------------------------------|-------------|
| <i>EXtreme EXB 700C Rack</i> | 17 |
| <i>EXtreme EXB 1000C Rack</i> | 21 |
| <i>EXtreme EXB 1500C Rack</i> | 27,5 |

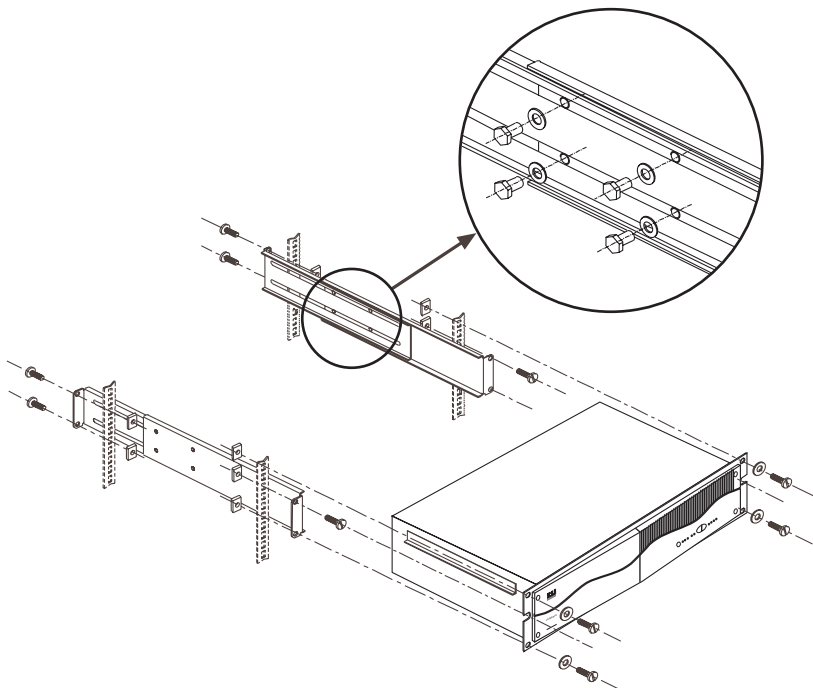

2 x EXB (Rack)

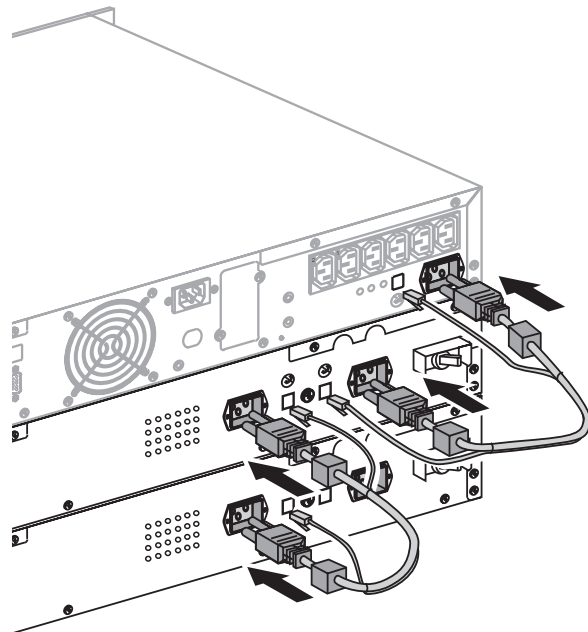

3 x EXB (Rack)

